

241 COMPASS & THERMOMETER STOPWATCH

IMPORTANT: READ THROUGH ALL INSTRUCTIONS BEFORE BEGINNING TO USE YOUR STOPWATCH

BATTERY CAUTION

- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries must be removed before recharging
- Rechargeable batteries only to be recharged under adult supervision
- Different types of batteries must not be mixed
- New and used batteries not to be mixed
- Exhausted batteries to be removed
- Do not dispose of battery in fire; battery may explode or leak
- Do not dispose of product in fire; battery may explode or leak

OPERATING INSTRUCTIONS

1. Remove the plastic film from the LCD display on the front of the pedometer.
2. Slowly pull the battery protector from the battery door located on the back to activate your pedometer.

FEATURES

- 24 hour stopwatch
- Time-of-day and calendar
- Alarm clock
- 12/24 hour time option

THE STOPWATCH OPERATION

Press **A** until you get to the stopwatch display. If necessary, press **B**, **STOP** and **C**— **RESET** to 0

START – STOP/TIMING

B – **START**, **B** – **STOP**. (Repeatedly press **B** for **TIME-IN/TIME-OUT TIMING**) **C**— **RESET**

SPLIT TIMING

B— **START**, **C**— **SPLIT**. **C**— **RELEASE** (Repeatedly press **C**, **C** for more split times)

B— **STOP**, **C**— **RESET**

1-2 FAST FINISH

B— **START**, **C**— **STOP #1**. **B**— **STOP #2** (See record #1 time)

C— **RELEASE** (See record #2 time) **C**— **Reset** to 00

TIME, CALENDAR & ALARM DISPLAY

Press **A** until you get time display.

Hold B display month, date & day

Hold C see alarm time

Hold C and press B alarm on/off

TO SET/DISARM HOURLY CHIME

Press **A** until you get time display. **Hold C** see alarm time and **Press A**. Chime/alarm is ON when dashes appear above display. Chime/alarm is OFF when no dashes appear.

TO SET ALARM

Hold A 2 times to enter set mode

Press C to select minutes & hours

Press B to change minutes or hours

Press A to return to time display

TO SET TIME AND CALENDAR

Press **A** 3 times to enter Set Mode

Press C to select seconds, minutes, hour, date, month, day


Press B to change any of the above. (Seconds only resets to 00)

Hold B to change digits rapidly

Press A to return to time display

BATTERY: Replace with LR41 battery

Main Function Buttons

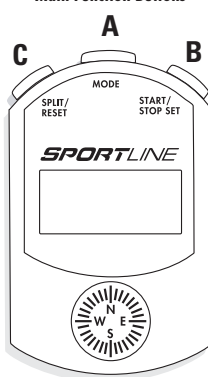

Please note: Before using your stopwatch, remove battery insulation strip. (Insulation strip designed to preserve battery power)

GUARANTEE CERTIFICATE

If at any time within one (1) year from the purchase date of this product, it fails to perform properly because of defects in material or manufacturing, return it prepaid to: E&B GIFTWARE, LLC, 585 Oak Ridge Road, Hazleton, PA 18202

Complete this Guarantee Certificate and enclose it (or a copy of it) with the product. To expedite replacement or repair, **do not return** the defective unit to the store from which it was purchased but return it directly to SPORTLINE. (PLEASE PRINT CLEARLY)

NAME _____ TEL _____

ADDRESS _____

CITY _____

STATE _____ ZIP _____

STORE PURCHASED FROM _____

DATE OF PURCHASE _____ PURCHASE PRICE _____

PROBLEM WITH PRODUCT _____

REPLACEMENT

This product has been carefully designed, manufactured and packaged. If any parts are missing or damaged, please contact us at the address above and we will replace unit at no charge. (Guarantee does not cover crystal or battery.) By contacting SPORTLINE, Inc. rather than the company from which you purchased this product, we will be able to more rapidly service your needs.

AFTER WARRANTY

If the warranty period has expired and the unit is returned to Sportline for servicing, enclose \$7.50 for postage and handling. Send your unit insured to our Service Department at the address shown. If you are located outside the United States either return the unit by insured mail or to the dealer/distributor where purchased.

SPORTLINE
THE PROFESSIONAL'S CHOICE
E&B GIFTWARE, LLC, 585 Oak Ridge Road, Hazleton, PA 18202